2FT 8W HYBRID TYPE A + B 36148A - 48E, 37010A

| | Dollast | | Start Type | Max Loading Qty | Compatibility (Y/N) | | | |
|-----------------|----------------------|---|-----------------------------------|-----------------------|---------------------|------------|------------|------------|
| No. | Ballast Brand | Model No. | | | 1 lamp | 2 lamps | 3 lamps | 4 lamps |
| 1 | ACT | ACT3P32ISUNVE | Instant Start | 3 | Y | Y | Υ . | N/T |
| 2 | ACT | ACT4P32ISUNVE | Instant Start | 4 | N | N/T | Υ | Υ |
| 3 | DAMAR | 1688B | Instant Start | 2 | Y | Y | N/T | N/T |
| 5 | DAMAR DAMAR | 1688D 3654C | Instant Start Instant Start | 3 | N N | Y | N/T Y | N/T N/T |
| 6 | EIKO | PM-2X32T8-UNV-IS | Instant Start | 2 | Y | Y | N/T | N/T |
| 7 | ESPEN | VE232MVHIPLE | Instant Start | 2 | Y | Y | N/T | N/T |
| 8 | ESPEN | VE2P32MVHIPE 11068 | Instant Start | 2 | Υ | Υ | N/T | N/T |
| 9 | ESPEN | VE2P32MVHIPHE 11069 | Instant Start | 2 | N | Y | N/T | N/T |
| 10 11 | ESPEN ESPEN | VE2P32MVHPPE 11080 VE332MVHIPLE | Programmed Start Instant Start | 3 | Y | Y | N/T | N/T N/T |
| 12 | ESPEN | VE3P32MVHIPE 11070 | Instant Start | 3 | Y | Y | Ϋ́ | N/T |
| 13 | ESPEN | VE3P32MVHIPLE 11056 | Instant Start | 3 | Υ | Υ | Υ | N/T |
| 14 | ESPEN | VE3P32MVHPPE 11083 | Programmed Start | 3 | N | Y | Υ | N/T |
| 15 16 | ESPEN ESPEN | VE4P32MVHIPE 11072 VE4P32MVHIPLE 11057 | Instant Start | 4 4 | N | N/T N/T | Y | N |
| 16 17 | ESPEN | VE4P32MVHPPE 11086 | Instant Start Programmed Start | 4 | Y | N/T | Y | N Y |
| 18 | FULHAM | FH12-UNV-1400L | Emergency | 1 | Y | N/T | N/T | N/T |
| 19 | GE | GE-132-MV-N | Instant Start | 1 | Υ | N/T | N/T | N/T |
| 20 | GE | GE-132-MV-PS-L | Programmed Start | 1 | Y | N/T | N/T | N/T |
| 21 22 | GE GE | GE232-120RES-B GE232MAX-G-N | Instant Start | 2 2 | Y | Y | N/T N/T | N/T N/T |
| 23 | GE | GE232MAX-G-N-DILY | Instant Start Instant Start | 2 | Y | Y | N/T | N/T |
| 24 | GE | GE232MAX-G-N-DIYB | Instant Start | 2 | Y | Y | N/T | N/T |
| 25 | GE | GE232MAX-L/ULTRA | Instant Start | 2 | Υ | Υ | N/T | N/T |
| 26 | GE | GE232MAX-L/ULTRA | Instant Start | 2 | Y | Y | N/T | N/T |
| 27 28 | GE GE | GE232MAXP-L/ULTRA GE-232-MV-N | Instant Start Instant Start | 2 2 | Y | Y | N/T N/T | N/T N/T |
| <u>20</u> 29 | GE | GE-232-MVPS-L | Programmed Start | 2 | Y | Y | N/T | N/T |
| 30 | GE | GE232-MVPS-N | Programmed Start | 2 | Y | Y | N/T | N/T |
| 31 | GE | GE232MVPSN-V03 | 1-10V Dimming | 2 | Υ | Υ | N/T | N/T |
| 32 | GE | GE-232-MVPS-XL | Programmed Start | 2 | N | Y | N/T | N/T |
| 33 34 | GE GE | GE332MAX-G-N GE332MAX-G-N-DIYB | Instant Start Instant Start | 3 | Y N | Y | Y | N/T N/T |
| 35 | GE | GE332MAXP-L/ULTRA | Instant Start | 3 | Y | Y | Y | N/T |
| 36 | GE | GE332MAXP-N/ULTRA | Instant Start | 3 | N | Υ | Υ | N/T |
| 37 | GE | GE332MV-N-DIY | Instant Start | 3 | Υ | Υ | Υ | N/T |
| 38 | GE | GE332-MVPS-L | Programmed Start | 3 | Y | Y | Y | N/T |
| 39 40 | GE GE | GE-332-MVPS-XL GE432MAX-G-N | Programmed Start Instant Start | 3 4 | Y N | Y N/T | Y | N/T Y |
| 41 | GE | GE432MAXG-N-DIYL | Instant Start | 4 | N | N/T | Ϋ́ | Y |
| 42 | GE | GE432MAX-L/Ultra | Instant Start | 4 | N | N/T | Υ | Υ |
| 43 | GE | GE432MAXP347-N | Instant Start | 4 | N | N/T | Υ | Y |
| 44 | GE | GE432MAXP-L/ULTRA | Instant Start | 2 | Y | N/T | Y | Y |
| 45 46 | HALCO HALCO | EP232IS/MV/HE EP332IS/L/MV/HE | Instant Start Instant Start | 3 | Y | Y | N/T Y | N/T N/T |
| 47 | HALCO | EP332IS/MV/HE | Instant Start | 3 | Y | Y | Ϋ́ | N/T |
| 48 | HALCO | EP432IS/L/MV/HE | Instant Start | 4 | N | N/T | Υ | Υ |
| 49 | HOWARD | EP2/32IS/MV/MC/HE | Instant Start | 2 | Υ | Υ | N/T | N/T |
| 50 | HOWARD | EP4/32IS/MV/MC/HE | Instant Start | 4 | N | N/T | Y | Y |
| 51 52 | HOWARD HOWARD | EPL2/32IS/MV/MC/HE EPL3/32IS/MV/SC/HE | Instant Start Instant Start | 3 | Y | Y | N/T Y | N/T N/T |
| 53 | HOWARD | EPL4/32IS/MV/MC/HE | Instant Start | 4 | Y | N/T | Ϋ́ | Y |
| 54 | KEYSTONE | KTEB-232-UV-IS-N-P | Instant Start | 2 | Υ | Υ | N/T | N/T |
| 55 | KEYSTONE | KTEB-332-UV-IS-N-P | Instant Start | 3 | Y | Y | Y | N/T |
| 56 57 | KEYSTONE KEYSTONE | KTEB-432RIS-1-TP-SL KTEB-432-UV-IS-N-P | Instant Start | 4 4 | Y N | N/T N/T | Y | Y |
| 58 | KEYSTONE | KT-EMRG-1400 | Instant Start Emergency | 2 | Y | Y Y | N/T | N/T |
| 59 | KEYSTONE | KT-EMRG-500-SL | Emergency | 1 | Y | N/T | N/T | N/T |
| 60 | PHILIPS | ICN-2M32-MC | Instant Start | 2 | N | Υ | N/T | N/T |
| 61 | PHILIPS | ICN-2P32-N | Instant Start | 2 | N | Y | N/T | N/T |
| 62 63 | PHILIPS PHILIPS | ICN-2P32-SC ICN-4P32-N | Instant Start Instant Start | 2 4 | N N | Y N/T | N/T Y | N/T Y |
| 64 | PHILIPS | IOP-2P32-LW-N | Instant Start | 2 | Y | Y | N/T | N/T |
| 65 | PHILIPS | IOP-2P32-N | Instant Start | 2 | N | Y | N/T | N/T |
| 66 | PHILIPS | IOP-2PSP32-LW-N | Programmed Start | 2 | Υ | Υ | N/T | N/T |
| 67 | PHILIPS | IOP-2PSP32-N | Programmed Start | 2 | N | Y | N/T | N/T |
| 68 69 | PHILIPS PHILIPS | IOP-4P32-LW-N IOP-4PSP32-LW-SC | Instant Start Programmed Start | 4 | N Y | N/T N/T | Y | Y |
| 70 | PHILIPS | IOP-4PSP32-LW-SC | Programmed Start Programmed Start | 4 | N | N/T | Y | Y |
| 71 | PHILIPS | IOPA-1P32-LW-N | Instant Start | 1 | Y | N/T | N/T | N/T |
| 72 | PHILIPS | IOPA-2P32-LW-N | Instant Start | 2 | Y | Υ | N/T | N/T |
| 73 | PHILIPS | IOPA-3P32-LW-N | Instant Start | 3 | N | Y | Y | N/T |
| 74 75 | PHILIPS | IOPA-3P32-LW-SC | Instant Start | 3 4 | Y | Y N/T | Y | N/T Y |
| 75 76 | PHILIPS PHILIPS | IOPA-4P32-N RCN-2S32-SC | Instant Start Instant Start | 2 | N N | N/T Y | N/T | N/T |
| 77 | PHILIPS | REL-2P32-SC | Instant Start | 2 | N | Y | N/T | N/T |
| 78 | PHILIPS | VEL-4P32-SC | Instant Start | 4 | N | N/T | Y | Y |
| 79 | PHILIPS | IZT-2S32-SC | 1-10V Dimming | 2 | Υ | Υ | N/T | N/T |

| 82 P | | BAF332IS/MV | Instant Start | 3 | Υ | Υ | Υ | |
|-------|-----------|-------------------------|------------------|---|-------|--------|----------|----------|
| | | BAF432IS/MV | Instant Start | 4 | Ň | N/T | <u>'</u> | N/T V |
| 83 R | | IEA432T8120N 3P20135 | Instant Start | 4 | Y | N/T | | |
| | | OHE 1X32T8/UNV ISN-SC | Instant Start | 1 | Y | N/T | N/T | N/T |
| | | OHE 2X32T8/347 ISL-SC | Instant Start | 2 | | 1 N/ 1 | N/T | N/T |
| | | OHE 2x32T8/UNV ISL-SC | Instant Start | 2 | N/T | Y | N/T | N/T |
| | | OHE 2X32T8/UNV ISL-SC-1 | Instant Start | 2 | 1N/ I | Y | N/T | N/T |
| | | OHE 2x32T8/UNV ISL-3C-1 | Instant Start | 2 | N/T | Y | N/T | N/T |
| | | OHE 2X32T8/UNV ISN-SC | | 2 | Y Y | Y | N/T | |
| | | C | Programmed Start | | Y | | | N/T |
| | SYLVANIA | QHE 2X32T8/UNV PSX-MC | Programmed Start | 2 | , | Y | N/T | N/T |
| | | QHE 3X32T8/UNV PSN-MC | Programmed Start | 3 | N | Y | Y | N/T |
| | | QHE 3x32T8/UNV ISL-SC | Instant Start | 3 | N/T | N/T | Υ | N/T |
| | | QHE 3XLEDT8/UNV-ISN-SC | Instant Start | 3 | Ν | Υ | Υ | N/T |
| | | QHE 4X32T8/UNV PSX-SC | Programmed Start | 4 | Υ | N/T | Υ | Υ |
| | | QHE 4x32T8/UNV ISL-SC | Instant Start | 4 | Υ | N/T | Υ | Υ |
| | | QHE 4x32T8/UNV ISN-SC | Instant Start | 4 | Ν | N/T | Υ | Υ |
| | | QHE 4xLEDT8/UNV-ISN-SC | Instant Start | 4 | Ν | N/T | Υ | Υ |
| | | QHES 2X32T8/UNV PSL-SC | Programmed Start | 2 | Ν | Υ | N/T | N/T |
| 99 S | Sylvania | QTP 1X32T8/UNV ISN-SC | Instant Start | 1 | Υ | N/T | N/T | N/T |
| 100 S | Sylvania | QTP 3X32T8/UNV ISN-SC | Instant Start | 3 | Ν | Υ | Υ | N/T |
| 101 S | Sylvania | QTP 4X32T8/UNV ISN-SC | Instant Start | 4 | Ν | N/T | Υ | Υ |
| 102 L | JLTRASAVE | UT232347 | Instant Start | 2 | Υ | Υ | N/T | N/T |
| 103 L | JNIVERSAL | B232IUNV-C | Instant Start | 2 | Υ | Y | N/T | N/T |
| 104 L | JNIVERSAL | B232IUNVEL-N | Instant Start | 2 | Υ | Υ | N/T | N/T |
| 105 L | JNIVERSAL | B232IUNVHP-N | Instant Start | 2 | Υ | Υ | N/T | N/T |
| 106 L | JNIVERSAL | B232PUNVHE-B | Programmed Start | 2 | Ν | Υ | N/T | N/T |
| 107 L | JNIVERSAL | B332IUNVEL-A | Instant Start | 3 | Υ | Υ | Υ | N/T |
| 108 L | JNIVERSAL | B332IUNVHE-A | Instant Start | 3 | Υ | Υ | Υ | N/T |
| 109 L | JNIVERSAL | B332IUNVHP-A | Instant Start | 3 | Υ | Υ | Υ | N/T |
| 110 L | JNIVERSAL | B432IUNVHE-A | Instant Start | 4 | N | N/T | Υ | Υ |
| 111 U | JNIVERSAL | B432IUNVHP-A | Instant Start | 4 | N | N/T | Υ | Υ |
| | | B432PUNVHE-A | Programmed Start | 4 | N | N/T | Y | Y |

Y: Compatible N: Incompatible N/T: Not tested

When working with electronic ballast please check the compatibility list first!
If you can't find your ballast on the list then bypass the fixture.
Do not install the LED tube with a ballast which is not on the ballast compatibility list, risk of fire!