



Installation and Operation Instructions

LED T8 Tube Direct Replacement Series

Input Voltage: 120-277 VAC 50/60 Hz (Determined by fluorescent ballast)

1. Product Features:

- UL Certified
- Plug-n-Play Replacement
- Full Glass Housing: No Aging, Yellowing, or Bending
- Compatible with instant start electronic ballasts and emergency ballasts.

2. Product Applications:

Widely used in residential buildings, offices, shopping malls, supermarkets, hospitals, assembly lines, warehouses, etc. for Energy saving illumination.

3. Installation Instructions:

Please completely comply with these instructions and notes, to ensure that the product is operated in a safe condition.


⚠ Safety Precautions:

For your and other's safety, please read the precaution carefully before installation:



- 1.) WARNING: Risk of shock. Disconnect power before installation.
- 2.) LED T8 lamp for use only with products described and installed in accordance with product specifications.
LED T8 lamp to be operated with fluorescent electronic ballast.
- 3.) WARNING: RISK OF FIRE, USE ONLY IN PLACE OF FLUORESCENT LAMPS SPECIFIED ON LABEL.
RISK OF ELECTRIC SHOCK, SUITABLE FOR DAMP LOCATIONS.

Installation Instructions:


1.) Turn Power OFF

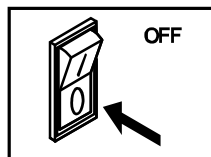

- 2.) Remove lens or diffuser. (If applicable)
- 3.) Remove existing fluorescent lamps from the luminaire.

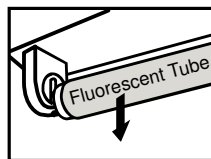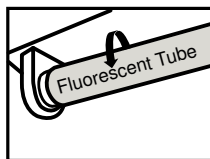


4.) Bring LED lamp to luminaire and insert lamp pins into luminaire lamp holders.

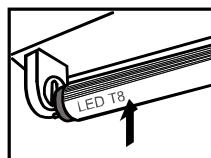

5.) Rotate LED lamp until lamp locks in place. Ensure that the LED lamp front points away from the back of the luminaire.

Note: Install LED T8 replacement lamp for each fluorescent lamp removed.

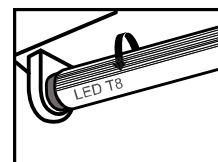

- 6.) Place lens or diffuser back in place (if applicable)
- 7.) Switch power ON.

