

Specifications

| | |
|-------------------------|-------------------------------------|
| Item | - 36280A |
| Model | - LED UFO200W/4K 165LM/W |
| Fixture Type | - LED |
| Watts | - 200 watts |
| Input Voltage | - 120-277VAC 50/60Hz |
| PF | - >0.9 |
| Lumens | - 33,000 |
| Kelvin | - 4000 |
| CRI | - 80 |
| Beam Angle | - 120° |
| Dimmable | - No |
| Multiple Listing | - ETL Listed |
| IP Rating | - IP66 (Suitable for wet locations) |
| Life Hours | - 50,000 |
| Ambient Operating Temp. | - -40°F ~ 122°F (-40°C ~ 50°C) |
| Diameter | - 15 inches (380 mm) |
| Length | - 7.5 inches (190.5mm) |
| Polycarbonate lens | |



| Illuminance at a Distance | | | |
|---------------------------|-----------------|----------------|----------------|
| | Average fc | Beam Width | |
| 10.0 ft | 117.6 fc | 30.4 ft | 30.5 ft |
| 15.0 ft | 52.3 fc | 45.7 ft | 45.7 ft |
| 20.0 ft | 29.4 fc | 60.9 ft | 61.0 ft |
| 25.0 ft | 18.8 fc | 76.1 ft | 76.2 ft |
| 30.0 ft | 13.1 fc | 91.3 ft | 91.5 ft |

■ Vert. Spread: 113.4°
■ Horiz. Spread: 113.5°

Caution

- This fixture must be wired in accordance with the National Electrical Code and applicable local ordinance. Proper grounding is required to ensure personal safety. Carefully observe grounding procedure under the installation section.
- Make certain power is OFF before starting the installation or attempting any maintenance. Risk of fire/electric shock. If not qualified, consult an electrician.
- Disconnect power at fuse or circuit breaker before installing or servicing.
- RISK OF BURN - Disconnect power and allow the fixture to cool before servicing.
- RISK OF PERSONAL INJURY - Fixture may become damaged and/or unstable if not installed properly. Make sure all fixture components are securely tightened.
- Este accesorio debe ser cableado de acuerdo con El Código Eléctrico Nacional y las normas locales aplicables. Se requiere una conexión a tierra adecuada para garantizar seguridad personal. Observar cuidadosamente la puesta a tierra. Procedimiento en la sección de instalación.
- Asegúrese de que la alimentación esté apagada antes de iniciar la Instalación o intento de mantenimiento. Riesgo de Incendio / descarga eléctrica. Si no está calificado, consulte a un electricista.
- Desconecte la corriente en el fusible o disyuntor antes de instalación o mantenimiento.
- RIESGO DE QUEMADURA - Desconecte la alimentación y permita El aparato se enfríe antes de realizar el mantenimiento.
- RIESGO DE LESIONES PERSONALES - El accesorio puede dañarse y / o inestable si no está instalado correctamente. Apretar todos los componentes del accesorio para Sus valores de par recomendados.



WARNING

- To reduce the risk of electrical shock, fire, or injury to person; all installation should be performed by a qualified electrician.
- Ensure power is off before installation or inspection. All wiring must be performed in accordance with the National Electrical Code (NEC) and local electrical code.
- Fixtures are rated for use in 120-277V, 50/60Hz protected circuit and 194°F (90°C) rated supply wire
- Wear gloves, safety glasses or goggles while performing installation.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
- To prevent wiring damage or abrasion, do not expose wiring to edge of sheet metal or sharp objects.
- Do not alter, relocate, or remove wiring, lampholders, power supply, or any other electrical components.

Installation

Step 1: Screw the eye bolt into the high bay light fixture, then tighten firmly.

Step 2: Hang the fixture onto the lifting hook or chain to prevent the fixture from falling.

Step 3: Wire fixture according to wiring diagram, National Electric Code (NEC) and local code standards.

WIRING DIAGRAM

