

Ballast Compatibility List

Item #	39242A	LED12T8/5CCT/3FT/HYBRID/SS			
Brand	Input	Item	Start Mode	Output	Compatible
KEYSTONE (Emergency Ballast)	120-277V	KT-EMRG-1400	Emergency Ballast (Instant Start)	4-lamp	YES
	120-277V	KT-EMRG-500-SL	Emergency Ballast (Instant Start)	4-lamp	YES
FULHAM (Emergency Ballast)	120-277V	FH12-UNV-1400L	Emergency Ballast (Instant Start)	4-lamp	YES
DAMAR (Emergency Ballast)	120-277V	418J D1400	Emergency Ballast (Instant Start)	3-lamp	YES
DAMAR	120-277V	01688B EL232-120/277HF	Instant Start	2-lamp	YES
	120-277V	03654C EL332-120/277HF	Instant Start	3-lamp	YES
	120-277V	03093B EL432-120/277HF	Instant Start	4-lamp	YES
GE	120-277V	GE232MAX-G-H	Instant Start	2-lamp	YES
	120-277V	GE132MAXP-N/ULTRA	Instant Start	1-lamp	YES
	120-277V	GE132MAX-L/ULTRA	Instant Start	1-lamp	YES
	120-277V	GE132MAX-N/ULTRA	Instant Start	1-lamp	YES
	120-277V	GE232MAX-G-N	Instant Start	2-lamp	YES
	120-277V	GE232MAX-G-N-DIYB	Instant Start	2-lamp	YES
	120-277V	GE232MAX-L/ULTRA	Instant Start	2-lamp	YES
	120-277V	GE232MAX-N/ULTRA	Instant Start	2-lamp	YES
	120-277V	GE332MAX-H/ULTRA	Instant Start	3-lamp	YES
	120-277V	GE332MAX-G-H	Instant Start	3-lamp	YES
	120-277V	GE432MAX-G-N-DIYB	Instant Start	4-lamp	YES
	120-277V	GE432MAX-G-N	Instant Start	4-lamp	YES
	347V	GE432MAX347-N	Instant Start	4-lamp	YES
	120-277V	GE432MAXP-N/ULTRA	Instant Start	4-lamp	YES
	120-277V	GE232MAXP-N/ULTRA	Instant Start	2-lamp	YES
	120-277V	GE132MAX-G-N	Instant Start	1-lamp	YES
	120-277V	GE432MAX-G-L	Instant Start	4-lamp	YES
	120-277V	GE432-MV-N/M	Instant Start	4-lamp	YES
	120-277V	GE332MAXP-N/ULTRA	Instant Start	2-lamp	YES
	120-277V	GE432MAXP-N+	Instant Start	2-lamp	YES
	347V	GE232MAXP347-H	Instant Start	2-lamp	YES
	347V	GE332MAX347-H	Instant Start	2-lamp	YES
	347V	GE332MAXP347-N	Instant Start	2-lamp	NO
	347V	GE232MAX-G-347	Instant Start	2-lamp	YES
	120-277V	GE132MAXP-H/ULTRA	Instant Start	2-lamp	NO
	347V	GE332MAX-G-347	Instant Start	2-lamp	NO
	480V	GE332MAXP480-H	Instant Start	2-lamp	YES
	480V	GE432MAX480-H	Instant Start	2-lamp	YES
	120-277V	GE432MAX-L/ULTRA	Instant Start	4-lamp	YES
	120-277V	GE632MAXP-H90-S60	Instant Start	6-lamp	YES

PHILIPS ADVANCE	120-277V	IOPA-1P32-N	Instant Start	2-lamp	YES
	120-277V	ICN-2P32-N	Instant Start	2-lamp	YES
	120-277V	IOP-2P32HL-SC	Instant Start	2-lamp	YES
	120-277V	IOPA-2P32HL-SC	Instant Start	2-lamp	YES
	120-277V	IOPA-2P32-N	Instant Start	2-lamp	YES
	120-277V	IOPA-2P32-LW-N	Instant Start	2-lamp	YES
	347V	GOPA-2P32-SC	Instant Start	2-lamp	YES
	120-277V	ICN-4P32-N	Instant Start	2-lamp	YES
	347V	GOPA-4P32-SC	Instant Start	2-lamp	YES
	120-277V	ICN-3P32-N	Instant Start	2-lamp	YES
	120-277V	IOPA-2P32-HL-N	Instant Start	2-lamp	YES
	120-277V	IOP-4P32-N	Instant Start	2-lamp	YES
	120-277V	IOPA-1P32-HL-N	Instant Start	2-lamp	YES
OSRAM / SYLVANIA	120-277V	QHE1X32T8/UNV ISN-SC	Instant Start	1-lamp	YES
	347V	QHE2X32T8/347 ISL-SC	Instant Start	2-lamp	YES
	347V	QHE2X32T8/347 ISN-SC	Instant Start	2-lamp	YES
	120-277V	QHE3X32T8/UNV ISN-SC	Instant Start	3-lamp	YES
	120-277V	QHE4X32T8/UNV ISH-HT-1	Instant Start	4-lamp	YES
	120-277V	QHE4X32T8/UNV ISL-SC	Instant Start	4-lamp	YES
	120-277V	QHE4X32T8/UNV ISN-SC	Instant Start	4-lamp	YES
	120-277V	QTP2X32T8/UNV ISN-SC	Instant Start	2-lamp	YES
UNIVERSAL	120-277V	B132IUNVHP-N	Instant Start	2-lamp	YES
	120-277V	B232IUNVHE-N	Instant Start	2-lamp	YES
	120-277V	B432IUNVHE-A	Instant Start	2-lamp	YES
	120-277V	B432IUNVEL-A	Instant Start	2-lamp	NO
ULTRASAVE	347V	UT232347	Instant Start	2-lamp	YES
ESPEN	120V	VE432120MIP	Instant Start	2-lamp	YES
HOWARD	120-277V	EP3/32IS/MV/MC/HE	Instant Start	2-lamp	YES
	120-277V	EP4/32IS/MV/MC/HE	Instant Start	2-lamp	YES
KEYSTONE	120V	KTEB-432RIS-1-TP	Instant Start	2-lamp	YES
	120V	KTEB-432RIS-1-TP/INB	Instant Start	2-lamp	YES
HATCH	120-277V	HL232BIS/UV/HE/W	Instant Start	2-lamp	YES
	120-277V	HL432BIS/UV/HE/W	Instant Start	4-lamp	YES
	120-277V	HL332AIS/UV/HE/W	Instant Start	3-lamp	YES
	120-277V	HL232AIS/UV/HE/W	Instant Start	2-lamp	YES
	347V	HL232AIS/34/HE/W	Instant Start	2-lamp	YES

Note: 1. Absence of a ballast from this chart does not imply incompatibility. Please reference the ballast manufacturer's instructions for installation and further information.

2 This list is to be used as a general guideline, the LED tube may not work if the ballast is over 5 years old or has a weak starting voltage.

3. Please use caution and test lamps in fixtures for an extended period of time to ensure proper operation.

4. Do not proceed with a mass installation until proper operation of the LED tube is verified.