

Ballast Compatibility List					
Item #	39243A	LED18T8/5CCT/4FT/HYBRID/SS			
Brand	Input	Item	Start Mode	Output	Compatible
KEYSTONE (Emergency Ballast)	120-277V	KT-EMRG-1400	Emergency Ballast (Instant Start)	4-lamp	YES
	120-277V	KT-EMRG-500-SL	Emergency Ballast (Instant Start)	4-lamp	YES
FULHAM (Emergency Ballast)	120-277V	FH12-UNV-1400L	Emergency Ballast (Instant Start)	4-lamp	YES
DAMAR (Emergency Ballast)	120-277V	418J D1400	Emergency Ballast (Instant Start)	3-lamp	YES
DAMAR	120-277V	01688B EL232-120/277HF	Instant Start	2-lamp	YES
	120-277V	03654C EL332-120/277HF	Instant Start	3-lamp	YES
	120-277V	03093B EL432-120/277HF	Instant Start	4-lamp	YES
GE	120-277V	GE232MAX-G-H	Instant Start	2-lamp	YES
	120-277V	GE240PSMVN-DIYB (T12)	Programmed Start	2-lamp	NO
	120-277V	GE132MAXP-N/ULTRA	Instant Start	1-lamp	YES
	120-277V	GE132MAX-L/ULTRA	Instant Start	1-lamp	YES
	120-277V	GE132MAX-N/ULTRA	Instant Start	1-lamp	YES
	120-277V	GE132MAX-H/ULTRA	Instant Start	1-lamp	YES
	120-277V	GE232MAX-G-N	Instant Start	2-lamp	YES
	120-277V	GE232MAX-G-N-DIYB	Instant Start	2-lamp	YES
	120V	GE232-120-RES	Instant Start	2-lamp	YES
	120V	GE232-120RESDIYB	Instant Start	2-lamp	YES
	120-277V	GE232MAX-N/ULTRA	Instant Start	2-lamp	YES
	120V	GEM220TS120/2-DIY	Magnetic Ballast	2-lamp	NO
	120-277V	GE-232-MV-PS-N	Programmed Start	2-lamp	NO
	120-277V	GE332MAX-H/ULTRA	Instant Start	3-lamp	YES
	120-277V	GE332MAX-G-H	Instant Start	3-lamp	YES
	120-277V	GE332MV-L	Instant Start	3-lamp	YES
	120-277V	GE432MAX-G-N-DIYB	Instant Start	4-lamp	YES
	120-277V	GE432MAX-G-N	Instant Start	4-lamp	YES
	120-277V	GE432MAXP-H	Instant Start	4-lamp	YES
	347V	GE432MAX347-N	Instant Start	4-lamp	YES
	120-277V	GE432MAXP-N/ULTRA	Instant Start	4-lamp	YES
	120V	GE432-120RESDIY	Instant Start	4-lamp	YES
	120-277V	GE232MAXP-N/ULTRA	Instant Start	2-lamp	YES
	120-277V	GE132MAX-G-N	Instant Start	1-lamp	YES
	277V	GEM240RS277	Instant Start	2-lamp	NO
	120V	GE232-120RES-B	Instant Start	1-lamp	YES
	347V	GE132-N-347	Instant Start	1-lamp	YES
	120-277V	GE-132-MV-N	Instant Start	1-lamp	YES
	120V	GE432-120RES-B	Instant Start	4-lamp	YES
	120-277V	GE332MAXP-N+	Instant Start	3-lamp	YES
	120-277V	GE232MAXP90-S60(2 Line on)	Instant Start	2-lamp	YES
	120-277V	GE432MAX-G-L	Instant Start	4-lamp	YES
	120V	GE432-120-RES	Instant Start	4-lamp	YES
	120-277V	GE432-MV-N/M	Instant Start	4-lamp	YES
	120-277V	GE232-MV-N/M	Instant Start	2-lamp	YES
	120-277V	GE332MAXP-N/ULTRA	Instant Start	3-lamp	YES
	120-277V	GE332MAX90-V60	Instant Start	3-lamp	YES
	120-277V	GE432MAXP-N+	Instant Start	4-lamp	YES
	120-277V	GE232MAXP-N+	Instant Start	2-lamp	YES
	347V	GE232MAXP347-H	Instant Start	2-lamp	YES
	347V	GE332MAX347-H	Instant Start	3-lamp	YES
	347V	GE332MAXP347-N	Instant Start	3-lamp	YES
	347V	GE232MAXP347-L	Instant Start	2-lamp	YES
	347V	GE232MAX-G-347	Instant Start	2-lamp	YES
	347V	GE432MAXP347-L	Instant Start	4-lamp	YES
	120-277V	GE132MAXP-H/ULTRA	Instant Start	1-lamp	YES

GE	347V	GE432MAX-G-347	Instant Start	4-lamp	YES
	347V	GE332MAX-G-347	Instant Start	3-lamp	YES
	120-277V	GE232MAXP90-V60	Instant Start	2-lamp	YES
	120-277V	GE332MAXP90-S60 1	Instant Start	3-lamp	YES
	120-277V	GE332MAXP90-S60 2	Instant Start	3-lamp	YES
	120-277V	GE432MAX90-V60	Instant Start	4-lamp	YES
	120-277V	GE432MAX90-S60 1	Instant Start	4-lamp	YES
	120-277V	GE432MAX90-S60 2	Instant Start	4-lamp	YES
	347V	GE432MAXP347-H	Instant Start	4-lamp	YES
	480V	GE332MAXP480-H	Instant Start	3-lamp	YES
	120-277V	GE632MAXP-H90	Instant Start	6lamp	YES
	480V	GE232MAXP480-H	Instant Start	2-lamp	YES
	120-277V	GE632MAXP-H90-S60	Instant Start	6-lamp	YES
	480V	GE432MAX480-H	Instant Start	4-lamp	YES
	120-277V	GE632MAXP-H90-V60	Instant Start	6lamp	YES
	120-277V	GE332MAXP-N-GEN1	Instant Start	3-lamp	YES
	347V	GE232MAXP347-N	Instant Start	2-lamp	YES
PHILIPS ADVANCE	120-277V	ICN-1P32-N	Instant Start	2-lamp	YES
	120-277V	IOPA-1P32-N	Instant Start	2-lamp	YES
	120-277V	ICN-2P32-N	Instant Start	2-lamp	YES
	120-277V	IOP-2P32HL-SC	Instant Start	2-lamp	YES
	120-277V	IOPA-2P32HL-N	Instant Start	2-lamp	YES
	120-277V	IOPA-2P32HL-SC	Instant Start	2-lamp	YES
	120-277V	IOPA-2P32-N	Instant Start	2-lamp	YES
	120-277V	IOPA-2P32-LW-N	Instant Start	2-lamp	YES
	347V	GOPA-2P32-SC	Instant Start	2-lamp	YES
	120-277V	ICN-4P32-N	Instant Start	2-lamp	YES
	120-277V	IOPA-4P32-N	Instant Start	2-lamp	YES
	347V	GOPA-4P32-SC	Instant Start	2-lamp	YES
	120-277V	ICN-3P32-N	Instant Start	2-lamp	YES
	120-277V	IOPA-2P32-HL-N	Instant Start	2-lamp	YES
	120-277V	IOP-4P32-N	Instant Start	2-lamp	YES
	120-277V	IOPA-1P32-HL-N	Instant Start	2-lamp	YES
OSRAM / SYLVANIA	120-277V	QHE1X32T8/UNV ISL-SC	Instant Start	2-lamp	YES
	120-277V	QHE1X32T8/UNV ISN-SC	Instant Start	2-lamp	YES
	120-277V	QHE2X32T8/UNV ISL-SC	Instant Start	2-lamp	YES
	120-277V	QTP2X32T8/UNV ISN-SC	Instant Start	2-lamp	YES
	120-277V	QHE3X32T8/UNV ISL-SC	Instant Start	2-lamp	YES
	120-277V	QTP3X32T8/UNV ISN-SC	Instant Start	2-lamp	YES
	120-277V	QHE3X32T8/UNV ISN-SC	Instant Start	2-lamp	YES
	120-277V	QTP4X32T8/UNV ISN-SC	Instant Start	2-lamp	YES
	120-277V	QHE4X32T8/UNV ISL-SC	Instant Start	2-lamp	YES
	120-277V	QHE4X32T8/UNV PSN-SC	Programmed Start	2-lamp	NO
	347V	QHE2X32T8/347 ISN-SC	Instant Start	2-lamp	YES
	277V	QT3X32T8/277 ISN-SC	Instant Start	2-lamp	YES
	277V	QUICKTRONIC® QT3X32 T8/277 ISN-SC	Instant Start	2-lamp	YES
	120-277V	QTP2X32T8/UNV ISH-SC	Instant Start	2-lamp	YES
UNIVERSAL	120-277V	B132IUNVEL-N	Instant Start	2-lamp	YES
	120-277V	B132IUNVHP-N	Instant Start	2-lamp	YES
	120-277V	B132IUNVHE-N	Instant Start	2-lamp	YES
	120-277V	B232IUNVHE-N	Instant Start	2-lamp	YES
	120-277V	B232IUNVHEH-A	Instant Start	2-lamp	YES
	120-277V	B332IUNVHE-A	Instant Start	2-lamp	YES
	120-277V	B432IUNVHE-A	Instant Start	2-lamp	YES
	120-277V	B432IUNVEL-A	Instant Start	2-lamp	YES
	120-277V	B332IUNVEL-A	Instant Start	2-lamp	YES
	120-277V	B332IUNVHP-A	Instant Start	2-lamp	YES
	120V	B132I120RH-A	Instant Start	2-lamp	YES

ESPEN	120V	VE432120MIP	Instant Start	2-lamp	YES
HOWARD	277V	EL3/32IS-277	Instant Start	2-lamp	NO
	120-277V	EP2/32IS/MV/MC/HE	Instant Start	2-lamp	YES
	120-277V	EP3/32IS/MV/MC/HE	Instant Start	3-lamp	YES
	120-277V	EP4/32IS/MV/MC/HE	Instant Start	2-lamp	YES
KEYSTONE	120V	KTEB-432RIS-1-TP/INB	Instant Start	2-lamp	YES
ACCUPRO	120V	AP-RS-232IS-120	Instant Start	2-lamp	YES
	120V	AP-RC-232IP-120-1	Instant Start	2-lamp	YES
	120-277V	AP-232IP-UNV-M	Instant Start	2-lamp	YES
CDL	120V	E232120MRSLP	Instant Start	2-lamp	YES
UNIVERSAL TRIAD	277V	C240SI277RH	Instant Start	2-lamp	YES
HATCH	120-277V	HL232BIS/UV/HE/W	Instant Start	2-lamp	YES
	120-277V	HL432BIS/UV/HE/W	Instant Start	4-lamp	YES
	120-277V	HL332AIS/UV/HE/W	Instant Start	3-lamp	YES
	120-277V	HL232AIS/UV/HE/W	Instant Start	2-lamp	YES
	347V	HL232AIS/34/HE/W	Instant Start	2-lamp	YES

Note: 1. Absence of a ballast from this chart does not imply incompatibility. Please reference the ballast manufacturer's instructions for installation and further information.

2 This list is to be used as a general guideline, the LED tube may not work if the ballast is over 5 years old or has a weak starting voltage.

3. Please use caution and test lamps in fixtures for an extended period of time to ensure proper operation.

4. Do not proceed with a mass installation until proper operation of the LED tube is verified.