



Pendent with 3/4 inch Conduit

1. Loosen the screw on side of the light, removing the bracket from Canopy light by pulling it slightly out, just leaving the ring on bracket.

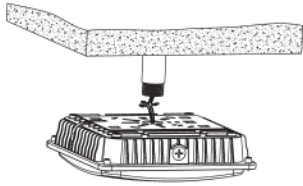


2. Connect the wire from conduit with Canopy, Black wire for Line, White for Neutral, Yellow Green for Ground. See wiring diagram for details

Screw the conduit into the hole on top of canopy light to complete the installation.

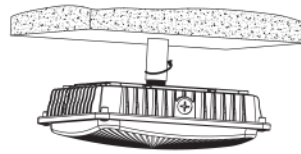


Surface Mounted with J-Box

1. Loosen the screw on side of the light, removing the bracket from Canopy light by pulling it slightly out, just leaving the ring on bracket.

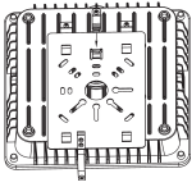


2. Fix the bracket on J-Box, and put the wire through the central hole for wiring.

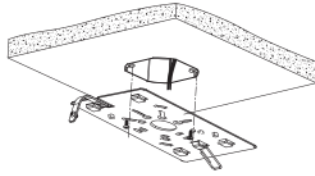

3. Attach the Canopy light with bracket by putting the ring on clips again. Connect the Black wire for Line, White for Neutral, Yellow Green for Ground. See wiring diagram for details.

Screw the conduit into the hole on top of canopy light to complete the installation.

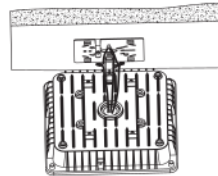

www.damar.com



33907A

DCNLP-59/5K/DIM
LED CANOPY



Wattage: 59W
CCT: 5000K
CRI: 70
Avg Hours: 50,000
Avg Lumens: 5605
Voltage: 120-277V
Hertz: 50/60Hz

DAMAR[®]

805 N Carnation
Aurora, MO 65605
Made in China